

## Assembly Instructions and Parts List 21" Bed Extension for JWL-1015/1015VS Lathes Stock No. 719101



# **AWARNING** Read and understand the entire owner's manual that accompanied your JWL-1015 lathe before attempting assembly or operation of accessories.

Inspect contents for shipping damage. Report any damage or part shortages to your distributor. Do not discard shipping materials until accessory is set up and functioning properly.

### Shipping contents

- 1 Bed extension
- 2 Socket head screws, 5/16x1
- 2 Lock washers, 5/16
- 2 Flat washers, 5/16
- 1 Positioning plate
- 1 Pan head screw, 1/4x1/2

#### Tools required for assembly

1/4" hex key ("Allen wrench") Cross point screwdriver

## Assembly

(Bracketed numbers refer to index numbers in the exploded view.)

- 1. Use the pan head screw [1] to attach plate [2] to end of bed extension [3] where the beds will meet.
- 2. Place bed extension against lathe bed and hold in place with the plate [2].
- 3. Insert two socket head screws [6], lock washers [5] and flat washers [4]. Align beds as closely as possible, then snug the screws but do not fully tighten yet.
- 4. Move tailstock over the seam of lathe bed and bed extension and align the clamping nut in the center where the beds meet. (Shift bed extension as needed until tailstock can slide onto it). Tighten tailstock clamping lever – this will properly align and make flush the beds.
- 5. Tighten both socket head screws [6].
- 6. Unlock tailstock, and slide it back and forth across seam to verify smooth travel.


JET 427 New Sanford Road LaVergne, Tennessee 37086 Ph.: 800-274-6848 www.jettools.com

## **Specifications**

Stock number	
Assembled dimensions	
Net weight	
Shipping dimensions	21.61" L x 7.52" W x 8.46" H
Shipping weight	
	2010

Specifications were current at time of publication, but because of our policy of continuous improvement, JET reserves the right to change specifications at any time and without prior notice, without incurring obligations.

## # 719101 Bed extension (21") for JWL-1015/1015VS lathes

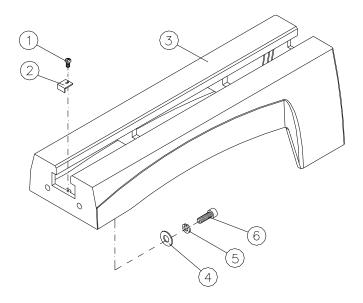

Index No F	Part No	Description	Size	Qty
1 1	rs-081F032	Phillips Pan Head Machine Screw	. 1/4"-20x1/2"	1
2J	JWL1221VS-502	Plate		1
3J	IWL1015-303	Extension Bed		1
4٦	rs-0680031	Flat Washer	. 5/16"	2
5 1	rs-0720081	Lock Washer	. 5/16"	2
бТ	rs-0208061	Socket Head Cap Screw	. 5/16"-18x1"	2

To order parts or reach our service department, call 1-800-274-6848 Monday through Friday, 8:00 a.m. to 5:00 p.m. CST. Having the Model Number and Serial Number of your machine available when you call will allow us to serve you quickly and accurately. Non-proprietary parts, such as fasteners, can be found at local hardware stores, or may be ordered from JET.

**WARNING:** This product can expose you to chemicals including lead and cadmium which are known to the State of California to cause cancer and birth defects or other reproductive harm, and phthalates which are known to the State of California to cause birth defects or other reproductive harm. For more information go to http://www.p65warnings.ca.gov.

**WARNING:** Drilling, sawing, sanding or machining wood products generates wood dust and other substances known to the State of California to cause cancer. Avoid inhaling dust generated from wood products or use a dust mask or other safeguards for personal protection.

Wood products emit chemicals known to the State of California to cause birth defects or other reproductive harm. For more information go to http://www.p65warnings.ca.gov/wood.